


## DADI ESAGONALI BASSI PASSO GROSSO



### Dadi esagonali bassi

- A norma DIN 439 forma B
- In acciaio 04 grezzo (brunito)
- Passo grosso metrico MA

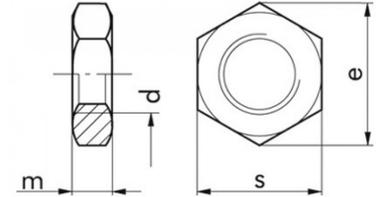

$\emptyset$	Art.
m 10	<b>F0311 10</b>
m 12	<b>F0311 12</b>
m 14	<b>F0311 14</b>
m 16	<b>F0311 16</b>
m 18	<b>F0311 18</b>
m 20	<b>F0311 20</b>
m 24	<b>F0311 24</b>
m 27	<b>F0311 27</b>
m 3	<b>F0311 3</b>
m 30	<b>F0311 30</b>
m 36	<b>F0311 36</b>
m 4	<b>F0311 4</b>
m 42	<b>F0311 42</b>
m 5	<b>F0311 5</b>
m 6	<b>F0311 6</b>
m 8	<b>F0311 8</b>

